

BLIND MARK™

WITH MAGNETIC POWER

US PATENT #6708421


The Perfect Cut Out...




Insert Target



Mark Perimeter

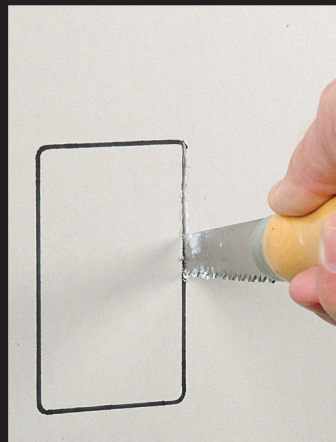

Cut Out Drywall

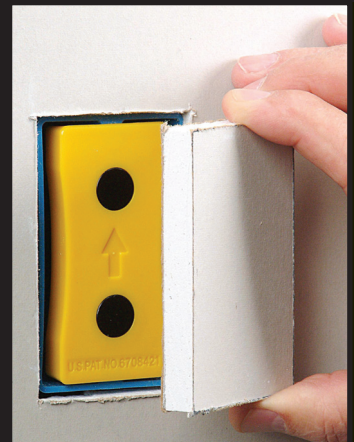

Remove Cut Out

1-800-976-3040

...Every time!

**CROREY
BUILDERS
INC.**

www.blindmark.com




**The Blind Mark™
Wall Kit Includes:**
(1) Blind Mark Locator
(3) Blind Mark Targets
(1) Storage Case



**The Blind Mark™ Wall Kit are now
available in all Lowe's Stores in the dry
wall section.**

\$24.98 + Tax

**The Blind Mark™ target was
designed, and successfully
tested for use with the most
commonly used plastic
electrical boxes.**

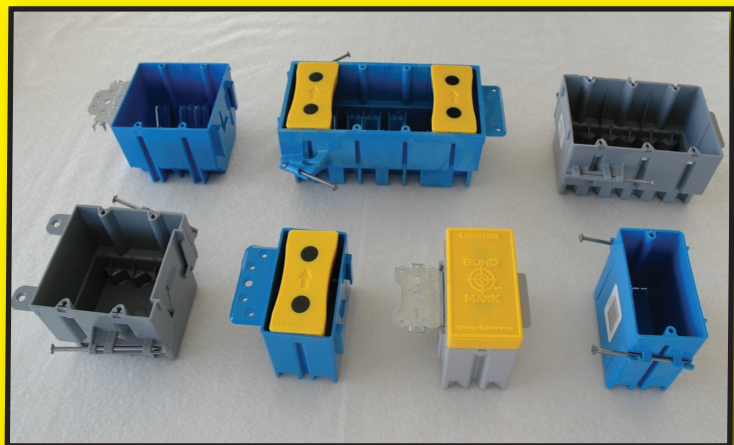

**(2) Blind Mark™ targets are inserted into
each end as shown when being used with
a triple-gang plastic electrical box.**

Six easy steps to use the Blind Mark™ Target/Locator.



Step 1

Compare the Blind Mark™ locator outside perimeter to the out side of the electrical box you are using. Electrical boxes vary so this will show you where to make your cut.(on the line inside or outside the line)



Step 2

Place Blind Mark™ target, with the arrow pointing up, in electrical box. If you have a multi-gang box you install the targets at each end of the box.


Step 3

With the target is installed in the box you cover the box up with the drywall. Position your drywall in the exact location and fasten it top and bottom.



Step 4

With the arrow on the target locator facing up, pass the locator across the area in which the target is located. The locator will find the target and snap in place. Do not force the locator into position. Hold the sides of the locator and let it jump to final position on its own. If the locator does not look plum rotate right or left till it appears plum. Then you take your pencil and mark around the locator, outlining the box perimeter.

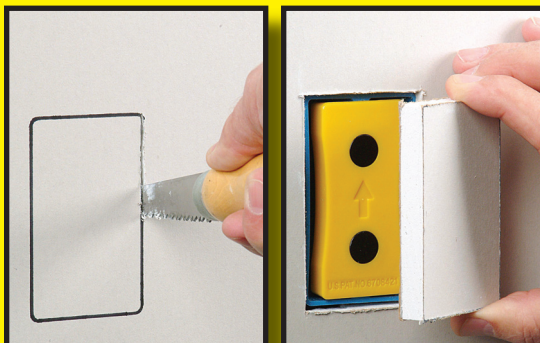


Step 5

Remove the locator from the drywall. Cut out the drywall using your mark as a guide. If you are using a hand saw, keep in mind, the cut on the side where the stud is must be a shallow cut. Multiple tools can then be used (hand or electric) to cut the drywall.

Remove the drywall cut out and Blind Mark™ target. Finish screwing down the drywall.

And you're Done!!!


The Perfect Cut Out...

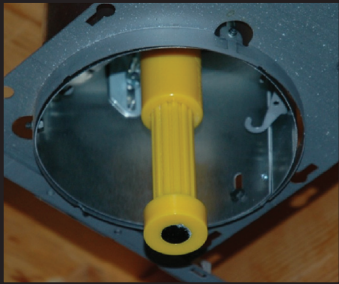

Insert Target



Locate Target

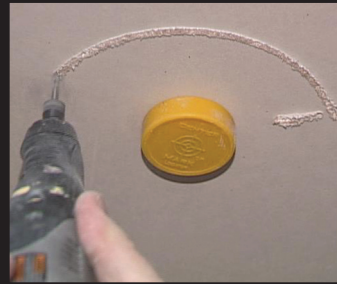

Cut Out Drywall



Remove Cut Out

...for Recessed Lighting



Insert Target



Remove Cut Out



Insert Targets



Remove Cut Out

...for Metal ducts and Electrical Boxes

Available only at www.blindmark.com



1-800-976-3040